


# HOW TO

## I Connector

### STEP | 1

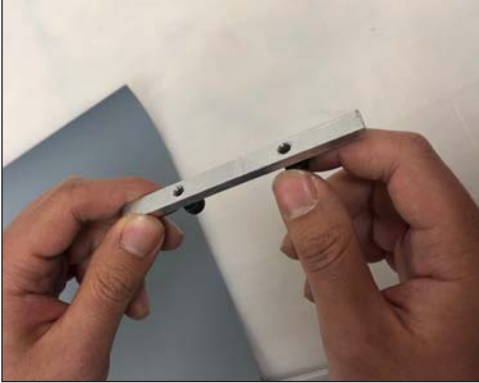


Untighten  
both bolts

### STEP | 2



Slide the  
I Connector  
into middle  
Section  
of the profile

### STEP | 3

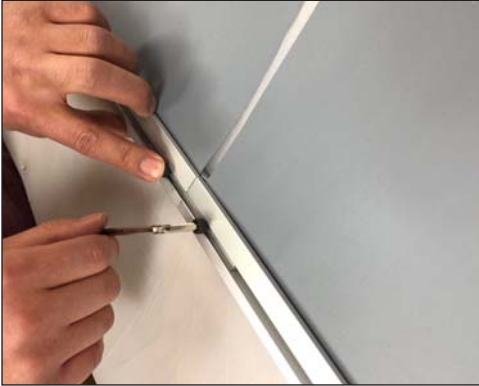

Tighten  
both bolts

